


DAF EST-52 ECU EMULATOR INSTALATION MANUAL



The emulator is mounted with the ignition switched off in the panel (wiring switchboard) under the hood in place of the original plug, which is the end of the wiring harness leading to the retarder controller - [8D] - photo on the left.

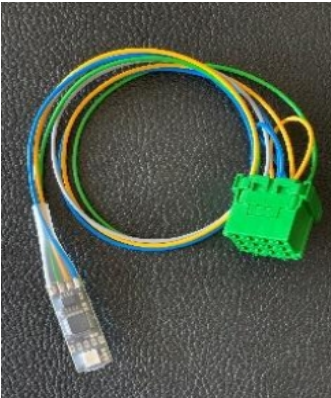