
## INSTALLATION INSTRUCTIONS FOR MAN EST-52 / EST-54 EMULATOR IN THE CABIN

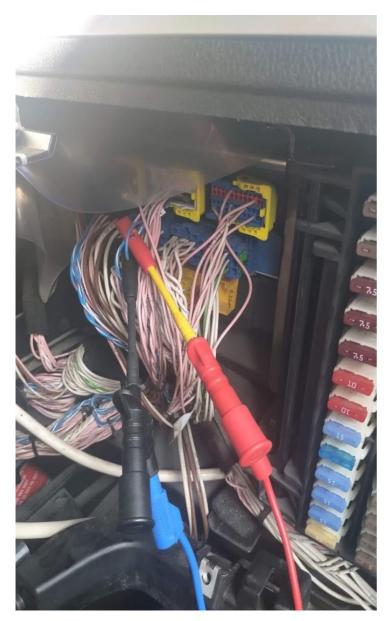

Please connect the emulator wires as follows:

- Emulator blue wire with blue-red wire (T-CAN HIGH)
- Emulator yellow wire with bluewhite wire (T-CAN LOW)
- Emulator red wire plus after ignition
- Black wire ground

Correct operation of the emulator is indicated by a diode flashing blue light at an interval of one second.

NOTE: A defective retarder controller should be disconnected from the vehicle's electrical system.